

Autoboss Scanner Function List

Base Function List

ACURA

Autoboss Scanner: V30
 Version: V3.3
 Date: 2009-4-28

Function		Read DTC	Live Data	Clear DTC	Reset ECU	Activate	Special Function
System							
	PGM_FI	√	√	√	√	√	After 2008 TP sensor reset
	AT	√	√	√	√	√	
	SRS	√	√	√			After 2002 SRS OPDS init
	ABS_VSA	√	√	√		√	
	EPS	√	√	√			
	IMM						02~07 Key program
BODY	Gauges	√	√	√		√	
	Lighting	√	√	√		√	
	Door Locks	√	√	√		√	
	Keyless	√	√	√		√	
	Power Windows	√	√	√		√	
	Wiper	√	√	√		√	
	Security	√	√	√		√	
	HVAC/Climate control	√	√	√			
	Power Sliding Door	√	√	√		√	