

**Basic/Special Function List**

HYUNDAI

Autoboss Scanner: V30  
Version: V3.0  
Date: 2008-10-31

Car	SYSTEM	SUB SYSTEM	ECU INFORMAT- ION	DIAGNOSTIC TROUBLE CODES	CLEAR THE TROUBLE CODES	CURRENT DATA	ACTUATIO N TEST	OTHER FUNCTION
01.ATOS F/LIFT 06-	1.ENGINE L4-SOHC	1.UNLEAD 1.0L GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		2.UNLEAD 1.1L GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		3.UNLEAD EOBD	√	√	√	√	√	
		4.UNLEAD MEX	√	√	√	√	√	
		5.LEAD 1.0L ALL	√	√	√	√	√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT
		6.LEAD 1.1L ALL	√	√	√	√	√	IDLE CO ADJUSTMENT

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	2.AUTOMATIC TRANSAXLE			√		√	√	√	
	3.ANTI-LOCK BRAKE SYSTEM			√		√	√	√	AIR BLEEDING MODE
	4.SRS-AIRBAG	√		√		√			CRASHING INFORMATION , ACTIVE DTC INFORMATION , HISTORY DTC INFORMATION
	5.IMMOBILIZER						√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
02.ATOS F/LIFT 04-05	1.ENGINE L4-SOHC	1.UNLEAD GEN	√	√		√	√	√	RESETTING ADAPTIVE VALUES
		2.UNLEAD EOBD	√	√		√	√	√	
		3.UNLEAD MEX	√	√		√	√	√	
		4.LEAD ALL	√	√		√		√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT
	2.AUTOMATIC TRANSAXLE			√		√	√	√	
	3.ANTI-LOCK BRAKE SYSTEM			√		√	√	√	AIR BLEEDING MODE

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	4.SRS-AIRBAG		√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION , HISTORY DTC INFORMATION
	5.IMMOBILIZER					√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
03.ATOS 98-03	1.ENGINE L4-SOHC	1.UNLEAD GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		2.UNLEAD EOBD	√	√	√	√		
		3.UNLEAD MEX	√	√	√	√		
		4.UNLEAD IMM		√	√	√	√	
		5.LEAD ALL	√	√	√	√	√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT
	2.AUTOMATIC TRANSAXLE			√	√	√	√	
	3.SAT			√	√	√		LEARNING MODE
	4.ANTI-LOCK BRAKE SYSTEM			√	√	√	√	AIR BLEEDING MODE

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	5.SRS-AIRBAG		√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION , HISTORY DTC INFORMATION
	6.IMMOBILIZER					√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
04.GETZ 06-	1.ENGINE(GASOLINE)	1.UNLEAD GEN	√	√	√	√	√	
		2.LEAD ALL	√	√	√	√	√	IDLE CO ADJUSTMENT
		3.UNLEAD EOBD	√	√	√	√	√	
	2.ENGINE-DIESEL		√	√	√	√	√	
	3.AUTOMATIC TRANSAXLE			√	√	√	√	
	4.ABS/ESP		√	√	√	√	√	
	5.SRS-AIRBAG		√	√	√			CRASHING INFORMATION
	6.IMMOBILIZER	1.GASOLINE				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		2.DIESEL					√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE	
	7.ELEC.POWER STEERING		√	√		√	√	√		
	8.CODE SAVING								√	
05.GETZ 03-05	1.ENGINE(GASOLINE)	1.UNLEAD GEN	√	√		√	√			
		2.LEAD ALL	√	√		√	√		IDLE CO ADJUSTMENT	
		3.UNLEAD EOBD	√	√		√	√			
	2.ENGINE-DIESEL		√	√		√	√	√		
	3.AUTOMATIC TRANSAXLE			√		√	√	√		
	4.ANTI-LOCK BRAKE SYSTEM			√		√	√	√	AIR BLEEDING MODE	
	5.SRS-AIRBAG		√	√		√			CRASHING INFORMATION	
	6.IMMOBILIZER	1.GASOLINE						√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		2.DIESEL				√		PASSWORD TEACHING/CHANGINEG TEACHING, NEUTRAL MODE, LIMP HOME MODE	
	7.ELEC.POWER STEERING		√	√	√	√	√		
	8.CODE SAVING							√	
06.ACCENT(MC)06-	1.ENGINE(GASOLINE)	1.UNLEAD 1.6L(CVVT)GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES	
		2.UNLEAD 1.6L(CVVT)EOBD	√	√	√	√	√	RESETTING ADAPTIVE VALUES	
		3.LEAD 1.6L(CVVT)ALL	√	√	√	√	√	RESETTING ADAPTIVE VALUES	
		4.UNLEAD 1.4L(DOHC)GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES	
		5.UNLEAD 1.4L(DOHC)EOBD	√	√	√	√	√	RESETTING ADAPTIVE VALUES	
		6.LEAD 1.4L(DOHC)ALL	√	√	√	√	√	RESETTING ADAPTIVE VALUES	
	2.ENGINE(DIESEL)		√	√	√	√	√		
	3.AUTOMATIC TRANSAXLE	1.GASOLINE(A4AF3)	√	√	√	√	√	√	RESTTING AUTO T/A VALUES
		2.DIESEL(A4CF2)	√	√	√	√	√	√	RESTTING AUTO T/A VALUES
	4.ABS/ESP		√	√	√	√	√	AIR BLEEDING MODE	
	5.SRS-AIRBAG		√	√	√				

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	6.ELEC.POWER STEERING		√	√	√	√		
	7.FULL AUTO AIR/CON.		√	√	√	√	√	
	8.IMMOBILIZER					√		PASSWORD TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE, SMAR TRA NEUTRAL
	9.CODE SAVING							√
07.ACCE 03-06	1.ENGINE(GASOLINE)	1.UNLEAD GEN	√	√	√	√		
		2.LEAD ALL	√	√	√	√		IDLE CO ADJUSTMENT
		3.UNLEAD EOBD	√	√	√	√		
		4.ULLEAD 03MY OBD-II	√	√	√	√		FREEZE FRAME DATA , EVAP.TEST(DMTL TEST)
		5.ULLEAD 04MY OBD-II	√	√	√	√	√	FREEZE FRAME DATA , EVAP.TEST(DMTL TEST)
		2.ENGINE-DIESEL		√	√	√	√	√
	3.AUTOMATIC TRANSAXLE			√	√	√	√	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	4.ANTI-LOCK BRAKE SYSTEM			√	√	√	√	AIR BLEEDING MODE
	5.SRS-AIRBAG	1.SRE-LC/HMC	√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION, HISTORY DTC INFORMATION
		2.SRE-SMART(DUAL STAGE)	√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION, HISTORY DTC INFORMATION
	6.IMMOBILIZER	1.GASOLINE				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
		2.DIESEL				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
	7.CODE SAVING							√
08.ACCENT 00-02	1.ENGINE L4-SOHC	1.LEAD ALL		√	√	√		IDLE CO ADJUSTMENT
		2.UNLEAD GEN	√	√	√	√		
		3.UNLEAD EOBD	√	√	√	√		

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		4.UNLEAD OBD-II	√	√	√	√		FREEZE FRAME DATA , EVAP.TEST(DMTL TEST)
	2.ENGINE L4-DOHC	1.LEAD ALL	√	√	√	√		IDLE CO ADJUSTMENT
		2.UNLEAD GEN	√	√	√	√		
		3.UNLEAD EOBD	√	√	√	√		
		4.UNLEAD OBD-II	√	√	√	√		FREEZE FRAME DATA , EVAP.TEST(DMTL TEST)
	3.ENGINE-DIESEL		√	√	√	√	√	
	4.AUTOMATIC TRANSAXLE			√	√	√	√	
	5.ANTI-LOCK BRAKE SYSTEM			√	√	√	√	AIR BLEEDING MODE
	6.SRS-AIRBAG		√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION , HISTORY DTC INFORMATION
	7.IMMOBILIZER	1.GASOLINE					√	PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
		2.DIESEL					√	PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
09.ACCENT	1.ENGINE L4-SOHC	1.UNLEAD 1.5L 95MY		√	√	√	√	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

(EXCEL)95-99	2.ENGINE L4-DOHC	2.UNLEAD 1.5L 96-98MY	✓	✓	✓	✓	
		3.UNLEAD 1.5L IMM	✓	✓	✓	✓	
		4.LEAD 1.5L 95MY	✓	✓	✓	✓	
		5.LEAD 1.5L 96-98MY	✓	✓	✓	✓	
		6.UNLEAD 96-97MY OBD- II	✓	✓	✓	✓	
		7. UNLEAD 98-99MY OBD- II	✓	✓	✓	✓	
		1.UNLEAD 1.5 95-7MY MAF	✓	✓	✓	✓	
	2.ENGINE L4-DOHC	2.UNLEAD 1.5L 97MY IMM	✓	✓	✓	✓	
		3.UNLEAD1.5L98-99MY IMM	✓	✓	✓	✓	
		4.UNLEAD 1.5L 97-98MY MAP	✓	✓	✓	✓	
		5.UNLEAD 96-97MY IMM	✓	✓	✓	✓	
3.AUTOMATIC TRANSAXLE							
10.EXCEL 90-94	1.ENGINE L4-SOHC	✓	✓	✓			
	2.AUTOMATIC TRANSAXLE	✓	✓	✓			

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

11.SCOUPE 91-96	1.ENGINE L4-SOHC	1.UNLEAD 94-96MY GEN		√	√	√		
		2.UNLEAD 92-94MY ALL		√	√	√		
		3.UNLEAD 91-92MY ALL		√	√	√		
		4.UNLEAD 94-96MY FED		√	√	√		
		5.UNLEAD 94-96MY CAL		√	√	√		
		6.LEAD 93-96MY ALL		√	√	√		
	2.ENGINE L4-DOHC TURBO	1.UNLEAD 94-96MY GEN		√	√	√		
		2.UNLEAD 92-94MY ALL		√	√	√		
		3.UNLEAD 92MY KOR		√	√			
		3.AUTOMATIC TRANSAXLE		√	√	√		
4.CRUISE CONTROL		√	√	√				
12.MATRIX 02-	1.ENGINE(GASOLINE)	1.LEAD 1.6L ALL		√	√	√		IDLE CO ADJUSTMENT
		2.UNLEAD 1.6L EGN	√	√	√	√		

**SPX. AUTOBOSS TECH. INC.**  
**Autoboss Scanner Function List**

	3.UNLEAD 1.6L EOBD	✓	✓	✓	✓		
	4.LEAD 1.8L ALL	✓	✓	✓		✓	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
	5.UNLEAD 1.8L EGN	✓	✓	✓		✓	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
	6.UNLEAD 1.8L EOBD	✓	✓	✓		✓	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
2.ENGINE(DIESEL)	1. 1.5 D-ENGINE	✓	✓	✓	✓	✓	
	2. 1.5 U-ENGINE	✓	✓	✓	✓	✓	
3.AUTOMATIC TRANSAXLE		✓	✓	✓	✓	✓	
4.ANTI-LOCK BRAKE SYSTEM			✓	✓	✓	✓	AIR BLEEDING MODE
5.SRS-AIRBAG		✓	✓	✓			CRASHING INFORMATION
6.TRACTION CONTROL SYSTEM			✓	✓	✓	✓	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		1.1.6L(GASOLINE)				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
	7.IMMOBILIZER	2.1.8L(GASOLINE)				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
		3.DIESEL				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
	8.CODE SAVING							√
13.ELANT RA(HD) 07-	1.ENGINE(GASOLINE)	1.LEAD 1.6L GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		2.UNLEAD 1.6L EOBD	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		3.LEAD 1.6L ALL	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		4.UNLEAD 1.6L OBD- II	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		5.UNLEAD 2.0L GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		6.UNLEAD 2.0L EOBD	✓	✓	✓	✓	✓	RESETTING VALUES	ADAPTIVE
		7.LEAD 2.0L ALL	✓	✓	✓	✓	✓	RESETTING VALUES	ADAPTIVE
		8.UNLEAD 2.0L OBD-II	✓	✓	✓	✓	✓	RESETTING VALUES	ADAPTIVE
	2.ENGINE(DIESEL)		✓	✓	✓	✓	✓		
	3.AUTOMATIC TRANSAXLE	1.1.6L GASOLINE	✓	✓	✓	✓	✓	RESETTING AUTO T/A VALUES	
		2.2.0L GASOLINE	✓	✓	✓	✓	✓	RESETTING AUTO T/A VALUES	
		3.1.6 DIESEL	✓	✓	✓	✓	✓	RESETTING AUTO T/A VALUES	
	4.ABS/ESP		✓	✓	✓	✓	✓		
	5.SRS-AIRBAG	1.ACU(GEN)	✓	✓	✓				
		2.ACU(NAS)	✓	✓	✓				
	6.FULL AUTO AIR/CON.		✓	✓	✓	✓	✓		
	7.ELEC.POWER STEERING		✓	✓	✓	✓			
	8.BODY CONTROL MODULE	1.GENERAL	✓				✓	✓	
		2.NAS	✓					✓	✓
	9.CODE SAVING							✓	
14.ELANTRA A 04-06	1.ENGINE(GASOLINE)	1.LEAD 1.6L ALL	✓	✓	✓	✓	✓	IDLE CO ADJUSTMENT	
		2.UNLEAD 1.6L EGN	✓	✓	✓	✓	✓	IDLE CO ADJUSTMENT	
		3.UNLEAD 1.6L	✓	✓	✓	✓	✓		

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		EOBD						
		4.LEAD 1.8/2.0L ALL	√	√	√	√	√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
		5.UNLEAD 1.8/2.0L(-CVVT) EGN	√	√	√	√	√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
		6.UNLEAD 1.8/2.0L(+CVVT) EGN	√	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		7.UNLEAD 1.8/2.0L(CVVT) EOBD	√	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		8.UNLEAD 2.0L(CVVT) OBD-II	√	√	√	√	√	READINESS TEST , FREEZE FRAME DATA , EVAP.TEST(DMTL TEST) , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
	2.ENGINE(DIESEL)		√	√	√	√	√	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

3.AUTOMATIC TRANSAXLE	1.1.6L		√	√	√	√	
	2.1.8/2.0L(SIEMENS PCM)	√	√	√	√	√	RESTTING AUTO T/A VALUES
	4.ANTI-LOCK BRAKE SYSTEM		√	√	√	√	AIR BLEEDING MODE
	5.SRS-AIRBAG	√	√	√	√	√	CRASHING INFORMATION
6.TRACTION CONTROL SYSTEM			√	√	√	√	
7.IMMOBILIZER	1.1.6L(GASOLINE)					√	PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
	2.1.8/2.0(GASOLINE)					√	PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
	3.DIESEL					√	PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
8.CODE SAVING						√	
15.ELANTR A 01-03	1.ENGINE(GASOLINE)	1.LEAD 1.6L ALL		√	√	√	IDLE CO ADJUSTMENT
		2.UNLEAD 1.6L EGN	√	√	√	√	

**SPX. AUTOBOSS TECH. INC.**  
**Autoboss Scanner Function List**

		3.UNLEAD 1.6L EOBD	√	√	√	√		
		4.LEAD 1.8/2.0L ALL	√	√	√		√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
		5.UNLEAD 1.8/2.0L EGN	√	√	√		√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
		6.UNLEAD 1.8/2.0L EOBD	√	√	√		√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
		7.UNLEAD 2.0L(-SULEV) OBD-II	√	√	√		√	READINESS TEST , FREEZE FRAME DATA , EVAP.TEST(DMTL TEST) , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		8.UNLEAD 2.0L(+SULEV) OBD-II	√	√	√	√	√	READINESS TEST , FREEZE FRAME DATA , EVAP.TEST(DMTL TEST) , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
	2.ENGINE(DIESEL)		√	√	√	√	√	
	3.AUTOMATIC TRANSAXLE	1. 1.6L		√	√	√	√	
		2. 1.8/2.0L(MELCO TCM)	√	√	√	√	√	
		3. 1.8/2.0L(SIEMENS PCM)	√	√	√	√	√	RESTTING AUTO T/A VALUES
	4.ANTI-LOCK BRAKE SYSTEM			√	√	√	√	AIR BLEEDING MODE
	5.SRS-AIRBAG		√	√	√			CRASHING INFORMATION
	6.TRACTION CONTROL SYSTEM			√	√	√	√	
	7.IMMOBILIZER	1.1.6L(GASOLINE)				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		2.1.8/2.0(GASOLINE)				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE	
		3.DIESEL				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE	
	8.CODE SAVING							√	
16.ELANTR A 96-00	1.ENGINE L4-DOHC	1.UNLEAD 1.5L 96MY IMM		√		√	√		
		2.UNLEAD1.5 97-98MY KOR		√		√	√		
		3.UNLEAD 96MY OBD- II		√		√	√		
		4.UNLEAD 97MY OBD- II		√		√	√		
		5.UNLEAD 98MY OBD- II		√		√	√		
		6.UNLEAD 99-00MY OBD- II		√		√	√		
	2.ENGINE L4-SOHC	1.UNLEAD 1.5L GEN		√		√			
		2.UNLEAD 1.5L IMM		√		√			
		3.LEAD 1.5L ALL		√		√			

**SPX** AUTOBOSS TECH. INC.  
**Autoboss Scanner Function List**

	3.AUTOMATIC TRANSAXLE	1. ~99MY(A4BF1)		√	√	√	√	
		2. 2000MY(A4BF2)		√	√	√	√	
	4.ANTI-LOCK BRAKE SYSTEM			√	√	√	√	AIR BLEEDING MODE
	5.SRS-AIRBAG			√	√			CRASHING INFORMATION
	6.CRUISE CONTROL			√	√			
	7.ELEC.POWER STEERING			√	√			
	8.IMMOBILIZER	1. GASOLINE					√	
2. DIESEL						√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
17.ELANTRA 92-95	1.ENGINE L4-SOHC			√	√	√		
	2.ENGINE L4-DOHC			√	√	√		
	3.AUTOMATIC TRANSAXLE			√	√	√		
	4.ANTI-LOCK BRAKE SYSTEM			√	√	√		
	5.SRS-AIRBAG			√	√			CRASHING INFORMATION
6.CRUISE CONTROL			√	√				
18.HD	1.ENGINE	1.LEAD 1.6L ALL		√	√	√		IDLE CO ADJUSTMENT

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

COUPE 02-06	2.UNLEAD 1.6L EGN	√	√	√	√		
	3.UNLEAD 1.6L EOBD	√	√	√	√		
	4.LEAD 2.0L ALL	√	√	√		√	√ RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
	5.UNLEAD 2.0L(-CVVT) EGN	√	√	√		√	√ RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
	6.UNLEAD 2.0L(+CVVT) EGN	√	√	√		√	√ FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
	7.UNLEAD 2.0L(-CVVT) EOBD	√	√	√		√	√ RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
	8.UNLEAD 2.0L(+CVVT) EOBD	√	√	√		√	√ FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		9.UNLEAD 2.0L(-CVVT) OBD-II	√	√	√	√	√	READINESS TEST , FREEZE FRAME DATA , EVAP.TEST(DMTL TEST) , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		10.UNLEAD 2.0L(CVVT) OBD-II	√	√	√	√	√	FREEZE FRAME DATA , EVAP.TEST(DMTL TEST) , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		11.LEAD 2.7L ALL	√	√	√	√	√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
		12.UNLEAD 2.7L GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		13.UNLEAD 2.7L(Ti O2S) EOBD	√	√	√	√	√	RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	14.UNLEAD 2.7L(Zr O2S) EOBD	√	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
	15.UNLEAD 2.7L(Ti O2S) OBD-II	√	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
	16.UNLEAD 2.7L(Zr O2S) OBD-II	√	√	√	√	√	READINESS TEST , FREEZE FRAME DATA , EVAP.TEST(DMTL TEST) , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
2.AUTOMATIC TRANSAXLE		√	√	√	√	√	
3.ABS/ESP		√	√	√	√	√	AIR BLEEDING MODE
4.SRS-AIRBAG		√	√	√			
5.TRACTION CONTROL SYSTEM			√	√	√	√	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

19.HD COUPE 97-01	6.IMMOBILIZER	1. UNLEAD 1.6/2.0L IMM	√	√	√	√	√	RESETTING VALUES , ADJUSTMENT , CONFIGURATION	ADAPTIVE IDLE CO VERSION	
		2. UNLEAD 2.7L IMM		√	√					
	7.AHLS		√	√	√	√				
	8.CODE SAVING							√		
	1.ENGINE L4-DOHC	4.EOBD 2001MY		√	√	√	√			
		5.UNLEAD 97MY OBD-II			√	√	√			
2.AUTOMATIC TRANSAXLE		1.97-99MY		√	√	√	√	√		
		2.2000MY~		√	√	√	√	√		
3.ANTI-LOCK BRAKE SYSTEM			√	√	√	√	√	AIR BLEEDING MODE		
4.SRS-AIRBAG	1. 97-99MY			√	√			CRASHING INFORMATION		
	2. 2000MY~	√	√		√			CRASHING INFORMATION , ACTIVE DTC INFORMATION , HISTORY DTC INFORMATION		
5.CRUISE CONTROL			√	√						
6.ELEC.POWER STEERING			√	√						

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	7.IMMOBILIZER			√	√					
20.SONATA 05-	1.ENGINE(GASOLINE)	1.UNLEAD 2.0/2.4L-ETS GEN	√		√	√	√	RESETTING VALUES , CONFIGURATION	ADAPTIVE VERSION	
		2. UNLEAD 2.0/2.4L-ETS EOBD	√		√	√	√	RESETTING VALUES , CONFIGURATION	ADAPTIVE VERSION	
		3. LEAD 2.0/2.4L-ETS ALL	√		√	√	√	RESETTING VALUES , CONFIGURATION	ADAPTIVE VERSION	
		4. UNLEAD 2.0/2.4L +ETS GEN	√		√	√	√	RESETTING VALUES , CONFIGURATION	ADAPTIVE VERSION	
		5. UNLEAD 2.0/2.4L +ETS EOBD	√		√	√	√	RESETTING VALUES , CONFIGURATION	ADAPTIVE VERSION	
		6. LEAD 2.0/2.4L +ETS ALL	√		√	√	√	RESETTING VALUES , CONFIGURATION	ADAPTIVE VERSION	
		7.UNLEAD 3.3L GEN			√	√	√	√	PCM AUTO RESET , PCM SETTING	DETECTION LOCK(MEC)
		8.UNLEAD 3.3L EOBD								

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		9.LEAD 3.3L ALL		√	√	√	√	PCM AUTO DETECTION RESET , PCM LOCK(MEC) SETTING
		10.UNLEAD 3.3L OBD-II		√	√	√	√	PCM AUTO DETECTION RESET , PCM LOCK(MEC) SETTING
2.ENGINE(DIESEL)		1.EURO-4VGT(CAN)	√	√	√	√	√	
3.AUTOMATIC TRANSAXLE		1. 2.0/2.4	√	√	√	√	√	RESTTING AUTO T/A VALUES
		2. 3.3	√	√	√	√	√	RESTTING AUTO T/A VALUES
		3.EURO-4 VGT(CAN)	√	√	√	√	√	RESTTING AUTO T/A VALUES
4.ABS/ESP			√	√	√	√	√	
5.SRS-AIRBAG			√	√	√			PASS.AIRBAG REALTIME INFO
6.ELEC.CONTROL SUSPENSION				√	√	√	√	
7.IMMOBILIZER		1.GASOLINE				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
		2.DIESEL				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
8.ELEC.POWER STEERING			√	√	√	√		

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	9.FULL AUTO AIR/CON.		√	√	√	√	√	
	10..BODY CONTROL MODULE		√			√	√	
	11.CODE SAVING							√
21.SONATA 99-04	1.ENGINE L4-DOHC	1.UNLEAD GEN	√	√	√	√	√	
		2.UNLEAD IMM	√	√	√	√	√	
		3.LEAD ALL	√	√	√	√	√	
		4.UNLEAD EOBD		√	√	√	√	
		5.UNLEAD OBD-II	√	√	√	√	FREEZE FRAME DATA , EVAP.TEST(DMTL TEST)	
		6.LPG(~2002) ALL	√	√	√	√	√	
	7.LPG(2003~) ALL	√	√	√	√	√		
	2.ENGINE V6-DOHC	1.UNLEAD GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		2.UNLEAD IMM	√	√	√	√	√	RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
3.LEAD ALL		√	√	√	√	√	RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION , IDLE CO ADJUSTMENT	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		4.UNLEAD (Ti O2S) EOBBD	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		5.UNLEAD (Zr O2S) EOBBD	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		6.UNLEAD (Ti O2S) OBD-II	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		7.UNLEAD (Zr O2S) OBD-II	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
	3.AUTOMATIC TRANSAXLE		√	√	√	√	
	4.ANTI-LOCK BRAKE SYSTEM	1.CTC TYPE(99-02MY)		√	√	√	AIR BLEEDING MODE
		2.BOSCH TYPE(03MY-)	√	√	√	√	AIR BLEEDING MODE
	5.SRS-AIRBAG	1.1999~2001MY	√	√	√		CRASHING INFORMATION , ACTIVE DTC INFORMATION, HISTORY DTC INFORMATION

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		2.F/LIFT	√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION, HISTORY DTC INFORMATION
	6.ELEC.POWER STEERING			√	√			
	7.TACTION CONTROL SYSTEM	1.CTC TYPE(99-02)		√	√	√	√	
		2.BOSCH TYPE(03MY-)		√	√	√	√	
	8.IMMOBILIZER					√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
	9.AHLS		√	√	√	√		√
	10.CODE SAVING(NEW EF)	1.WITHOUT IMMOBILIZER						√
		2.WITH IMMOBILIZER						
22.SONATA 94-98	1.ENGINE L4-SOHC	1.UNLEAD 1.8L ALL		√	√	√		
		2.UNLEAD 2.0L ALL		√	√	√		
		3.LEAD 1.8L ALL		√	√	√		
		4.LEAD 2.0L ALL		√	√	√		
		5.UNLEAD 97MY OBD-II		√	√	√	√	
		6.UNLEAD 98MY OBD-II		√	√	√	√	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	2.ENGINE L4-DOHC	1.UNLEAD 1.8L ALL		√	√	√		
		2.UNLEAD 2.0L ALL		√	√	√		
		3.LEAD 2.0L ALL		√	√	√		
		4.UNLEAD 97MY OBD-II		√	√	√		
		5.UNLEAD 98MY OBD-II		√	√	√	√	
	3.ENGINE V6-DOHC	1.UNLEAD 3.0L ALL		√	√	√		
		2.LEAD 3.0L ALL		√	√	√		
		3.UNLEAD 97MY OBD-II		√	√	√	√	
		4.UNLEAD 98MY OBD-II		√	√	√	√	
	4.AUTOMATIC TRANSAXLE			√	√	√		
	5.ANTI-LOCK BRAKE SYSTEM			√	√	√		
	6.SRS-AIRBAG			√	√			CRASHING INFORMATION
	7.IMMOBILIZER			√	√			
	8.ELEC.CONTROL SUSPENSION			√	√	√		
	9.CRUISE CONTROL			√	√			
23.SONATA	1.ENGINE L4-SOHC			√	√	√		
89-93	2.ENGINE L4-DOHC			√	√	√		

**SPX** AUTOBOSS TECH. INC.  
**Autoboss Scanner Function List**

	3.ENGINE V6-DOHC			√		√	√		
	4.AUTOMATIC TRANSAXLE			√		√	√		
	5.ANTI-LOCK BRAKE SYSTEM			√		√	√		
	6.CRUISE CONTROL			√		√			
24.XG 99-05	1.ENGINE V6-DOHC	1.LEAD ALL	√	√		√	√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION	
		2.LEAD(+ETS) ALL	√	√		√	√		
		3.UNLEAD GEN	√	√		√	√	RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION	
		4.UNLEAD(+ETS) GEN	√	√		√	√		
		5.UNLEAD(Ti O2S) IMM	√	√		√	√	RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION	

**SPX. AUTOBOSS TECH. INC.**  
**Autoboss Scanner Function List**

		6.UNLEAD(Zr O2S) IMM	√	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		7.UNLEAD(+ETS) IMM	√	√	√	√	√	
		8.UNLEAD(+ETS) OBD-II	√	√	√	√	√	FREEZE FRAME DATA , EVAP.TEST(DMTL TEST)
	2.AUTOMATIC TRANSAXLE	1. 2.0/2.5L	√	√	√	√	√	
		2. 3.0/3.5L	√	√	√	√	√	
	3.ANTI-LOCK BRAKE SYSTEM			√	√	√	√	AIR BLEEDING MODE
	4.SRS-AIRBAG	1. ~2002MY	√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION, HISTORY DTC INFORMATION
		2. F/LIFT	√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION, HISTORY DTC INFORMATION

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	5.TRACTION CONTROL SYSTEM		√	√	√	√	
	6.ELEC.CONTROL SUSPENSION		√	√	√	√	
	7.ELEC.POWER STEERING		√	√			
	8.IMMOBILIZER		√	√			
	9.AHLS	√	√	√	√		
	10.CODE SAVING						√
25.MARCIA 96-98	1.ENGINE L4-DOHC		√	√	√		
	2.ENGINE V6-DOHC		√	√	√		
	3.AUTOMATIC TRANSAXLE		√	√	√		
	4.ANTI-LOCK BRAKE SYSTEM		√	√	√		
	5.SRS-AIRBAG		√	√			CRASHING INFORMATION
	6.ELEC.CONTROL SUSPENSION		√	√	√		
26.CENTEN NIAL 00-07	1.ENGINE	1.UNLEAD 3.0L ALL	√	√	√	√	√
		2.UNLEAD 3.0L(+ETS) ALL	√	√	√	√	√
		3.UNLEAD 3.5L(+ETS) GEN	√	√	√	√	√
		4.UNLEAD 3.5L(+ETS)	√	√	√	√	√

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		EOBD						
		5.LEAD 3.5L(+ETS)	√	√	√	√	√	
		ALL						
		6.UNLEAD 4.5L GDI	√	√	√	√	√	
		ALL						
		7.UNLEAD 4.5(+ETS)	√	√	√	√	√	
		OBD-II						
		8.UNLEAD 4.5L MPI	√	√	√	√	√	
		GEN						
		9.UNLEAD 4.5L MPI	√	√	√	√	√	FREEZE FRAME DATA
		EOBD						
		10.UNLEAD 4.5L MPI	√	√	√	√	√	FREEZE FRAME DATA ,
		OBD-II						EVAP.TEST(DMTL TEST)
		11.LEAD 4.5L MPI		√	√	√	√	
		ALL						
	2.AUTOMATIC TRANSAXLE	1. 3.0/3.5L	√	√	√	√	√	
		2. 4.5L	√	√	√	√	√	
	3.VDC	1.MELCO TYPE				√	√	
		2.CTC TYPE(2002.09~)	√	√	√	√	√	AIR BLEEDING MODE
	4.ANTI-LOCK BRAKE SYSTEM	1. ITI TYPE		√	√	√	√	AIR BLEEDING MODE
		2. CTC TYPE(2002.09~)	√	√	√	√	√	AIR BLEEDING MODE

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	5.SRS-AIRBAG	1. ~2001MY(SDM-GH)		√	√			CRASHING INFORMATION	
		2. 2002MY~(SRE-SMART)	√	√	√		CRASHING INFORMATION , ACTIVE DTC INFORMATION , HISTORY DTC INFORMATION		
	6.IMMOBILIZER			√	√				
	7.ELEC.CONTROL SUSPENSION	1. ECS		√	√	√	√		
		2. ACTIVE ECS				√	√	√	
	8.TRACTION CONTROL SYSTEM	1. ITI TYPE			√	√	√	√	
		2. CTC TYPE(2002.09~)	√	√	√	√	√	√	AIR BLEEDING MODE
	9.FULL AUTO AIR/CON.			√	√		√	√	
	10.LAN		√	√			√	√	
	11.ELEC.POWER STEERING			√		√			
	12.AHLS		√	√		√	√		
	13.CODE SAVING								√
	27.GRAN DEUR(TG) 06-	1.ENGINE(GASOLINE)	1.UNLEAD GEN		√	√		√	√
2.UNLEAD EOBD				√	√		√	√	PCM AUTO DETECTION PESET, PCM LOCK(MEC) SETTING
3.LEAD ALL				√	√		√	√	PCM AUTO DETECTION PESET, PCM LOCK(MEC) SETTING
4.UNLEAD OBD- II				√	√		√	√	PCM AUTO DETECTION PESET, PCM LOCK(MEC) SETTING
2.ENGINE(DIESEL)		1.EURO-4 VGT(CAN)	√	√		√	√	√	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	3.AUTOMATIC TRANSAXLE	1.GASOLINE	√	√	√	√	√	RESTTING AUTO T/A VALUES	
		2.DIESEL	√	√	√	√	√	RESTTING AUTO T/A VALUES	
	4.ABS/ESP		√	√	√	√	√		
	5.SRS-AIRBAG	1.GENERAL	√	√	√			PASS.AIRBAG REAL TIME INFO	
		2.NAS	√	√	√			PASS.AIRBAG REAL TIME INFO	
	6.IMMOBILIZER	1.GASOLINE					√	PASSWORD TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE	
		2.DIESEL					√	PASSWORD TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE	
	7.ELEC.CONTROL SUPERSION			√	√	√	√		
	8.FULL AUTO AIR/CON.		√	√	√	√	√		
	9.BODY CONTROL MODULE	1.BODY CONTROL MODULE	√	√	√	√	√	√	
		2.DRIVER DOOR MODULE(DDM)	√			√	√	√	
		3.ASSIST DOOR MODULE(ADM)	√			√	√	√	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		4.IMS	√		√	√	√		
		5.TILTTELESCOPE(TILT)	√		√	√	√		
		6.USER OPTION						LOCK/UNLOCK ALARM, ARM/DISARM BY KEY, AUTO DOOR LOCK, GET INGET DOWN LINKAGE	
	10.AHLS		√	√	√	√			
28.GRAND EUR(TG)-06	1.ENGINE	1.UNLEAD 3.3L GEN		√	√	√	√	PCM AUTO DETECTION RESET	
		2.UNLEAD 3.3L EOBD		√	√	√	√	PCM AUTO DETECTION RESET	
		3.LEAD(+ETS) ALL		√	√	√	√	PCM AUTO DETECTION RESET	
	2.AUTOMATIC TRANSAXLE			√	√	√	√	RESTTING AUTO T/A VALUES	
	3.ABS/ESP		√	√	√	√	√		
	4.SRS-AIRBAG	GENERAL	√	√	√				PASS.AIRBAG REALTIME INFO
		NAS	√	√	√				PASS.AIRBAG REALTIME INFO, PODS RESET
	5.IMMOBILIZER					√			PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
6.ELEC.POWER STEERING		√	√	√	√				

**SPX. AUTOBOSS TECH. INC.**  
**Autoboss Scanner Function List**

	7.FULL AUTO AIR/CON.		√	√	√	√	√	
	8.BODY CONTROL MODULE	1. BODY CONTROL MODULE	√	√	√	√	√	
		2. DRIVER DOOR MODULE(DDM)	√		√	√	√	
		3.ASSIST DOOR MODULE(ADM)	√		√	√	√	
		4.IMS	√		√	√	√	
		5.TILT&TELESCOPE(TI LT)	√		√	√	√	
		6.USER OPTION						LOCK/UNLOCK ALARM , ARM/DISARM BY KEY, AUTO DOOR LOCK , GET IN&GET DOWN LINKAGE
	9.SMART KEY SYSTEM	1. INTERFACE UNIT	√	√	√	√	√	
		2. SMART KEY UNIT	√	√	√	√	√	
	10.AHLS		√	√	√	√		
29.GRAND EUR 94-98	1.ENGINE L4-SOHC			√	√	√		
	2.ENGINE L4-DOHC			√	√	√		
	3.ENGINE V6-DOHC			√	√	√		
	4.ENGINE V6-DOHC			√	√	√		
	5.AUTOMATIC TRANSAXLE			√	√	√		

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	6.ANTI-LOCK BRAKE SYSTEM			√	√	√		
	7.SRS-AIRBAG			√	√	√		
	8.ELEC.CONTROL SUSPENSION			√	√	√		
	9.FULLAUTO AIR/COM			√	√	√		
30.GRAND EUR 89-93	1.ENGINE L4-SOHC			√	√	√		
	2.ENGINE V6-DOHC			√	√	√		
	3.AUTOMATIC TRANSAXLE			√	√	√		
	4.ELEC.CONTROL SUSPENSION			√	√	√		
	5.CRUISE CONTROL			√	√	√		
31.H-100 94-01	1.ENGINE	1.UNLEAD 94-96MY ALL		√	√	√		
		2.UNLEAD 97-2000MY ALL		√	√			
		3.LEAD 94-96MY ALL		√	√	√		
		4.LEAD 97-2000MY ALL		√	√			
		5.LEAD 97-98MY ALL		√	√			
		6.ENGINE DIESEL		√	√	√	√	

**SPX** AUTOBOSS TECH. INC.  
**Autoboss Scanner Function List**

	2.AUTOMATIC TRANSAXLE			√	√			
32.H-100 04-06	1.ENGINE		√	√	√	√	√	
	2.AUTOMATIC TRANSAXLE			√	√			
	3.ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√	AIR BLEEDING MODE
33.H-100 TRUCK 04-	1.ENGINE		√	√	√	√	√	
	2.ANTI-LOCK BRAKE SYSTEM		√	√	√	√	√	AIR BLEEDING MODE
	3.CODE SAVING							√
34.H-100 97-03	1.ENGINE L4-SOHC	1.GASOLINE		√	√	√		
		2.DIESEL		√	√	√	√	
		3.FBM		√	√			
	2.AUTOMATIC TRANSAXLE			√	√			
35.H-1 07-	1.ENGINE(GASOLINE)	1.UNLEAD GEN CAN	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		2.UNLEAD EOBD CAN	√	√	√	√	√	RESETTING ADAPTIVE VALUES, VERSION CONFIGURATION
		3.LEAD ALL CAN	√	√	√	√	√	RESETTING ADAPTIVE VALUES
	2.ENGINE(DIESEL)	1.T/CHARGER(COVEC-F)	√	√	√	√	√	
		2.CRDI(A-ENG) EURO-4(-CPF)	√	√	√	√	√	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		3.CRDI(A-ENG) EURO-4(+CPF)	√	√	√	√	√	
		1.GASOLINE		√	√	√	√	RESTTING AUTO T/A VALUES
	3.AUTOMATIC TRANSAXLE	2.T/CHARGER(COVEC -F)	√	√	√	√	√	
		3.CRDI(A-ENG)EURO- 4	√	√	√	√	√	RESTTING AUTO T/A VALUES
	4.ABS/ESP		√	√	√	√	√	
	5.SRS-AIRBAG		√	√	√			
	6.FULL AUTO AIR/CON.		√	√	√	√	√	
	7.BODY CONTROL MODULE		√	√	√			
	8.IMMOBILIZER	1.GASOLINE CAN				√		PASSOWORD TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE
		2.T/CHARGER(COVEC -F)				√		PASSOWORD TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		3.CRDI(A-ENG) EURO-4				√		PASSOWORD TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE	
36.H-1 98-06	1.ENGINE-GASOLINE:2002M Y~	1.UNLEAD 2.4L GEN	√	√	√	√	√	FREEZE FRAME DATA	
		2.UNLEAD 2.4L EOBD	√	√	√	√	√	FREEZE FRAME DATA	
		3.LEAD 2.4L ALL	√	√	√	√	√		
	2.ENGINE-GASOLINE::~2001 MY			√	√	√			
	3.ENGINE-DIESEL	1.T/CHARGER(COVEC -F)		√	√	√	√		
		2.T/C INTERCOOLER(COVE C)	√	√	√	√	√		
		3.CRDI(A-ENG)		√	√	√	√		
		4.CRDI(A-ENG) F/LIFT		√	√	√	√		
	4.ENGINE-FBM			√	√	√	√		
	5.AUTOMATIC TRANSAXLE		√	√	√	√	√		
	6.ANTI-LOCK BRAKE SYSTEM	1. 2WD		√	√	√	√	√	AIR BLEEDING MODE

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		2. 4WD	√	√	√	√	√	AIR BLEEDING MODE
	7.SRS-AIRBAG		√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION , HISTORY DTC INFORMATION
	8.TCCM	1. 2002MY~		√	√			
		2. ~2001MY		√	√			
	9.IMMOBILIZER	1. GASOLINE(2002MY~)		√	√			
		2. GASOLINE(~2001MY)		√	√			
		3.DIESEL(CRDI)					√	PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
		4.DIESEL(COVEC-F)		√	√			
		5.DIESEL(DDS)		√	√			
	10.FUEL FIRED HEATER			√	√	√	√	
	11.CODE SAVING							√
37.H-1 TRUCK 01-03	1.ENGINE-DIESEL		√	√	√	√	√	
	2.AUTOMATIC TRANSAXLE		√	√	√	√	√	
	3.ANTI-LOCK BRAKE SYSTEM			√	√	√	√	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	4.SRS-AIRBAG		√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION , HISTORY DTC INFORMATION
38.SANTAFE(MC)06-	1.ENGINE(GASOLINE)	1.UNLEAD GEN		√	√	√	√	PCM AUTO DETECTION RESET, PCM LOCK(MEC) SETTING
		2.UNLEAD EOBD		√	√	√	√	PCM AUTO DETECTION RESET, PCM LOCK(MEC) SETTING
		3.LEAD ALL		√	√	√	√	PCM AUTO DETECTION RESET, PCM LOCK(MEC) SETTING
		4.UNLEAD OBD- II		√	√	√	√	PCM AUTO DETECTION RESET, PCM LOCK(MEC) SETTING
	2.ENGINE(DIESEL)	1.EURO-3 VGT(KWP)	√	√	√	√	√	
		2.EURO-4 VGT-CPF(CAN)	√	√	√	√	√	
		3.EURO-4 VGT+CPF(CAN)	√	√	√	√	√	
	3.AUTOMATIC TRANSAXLE	1.GASOLINE		√	√	√	√	RESTTING AUTO T/A VALUES
		2.EURO-3 VGT(KWP)	√	√	√	√	√	RESTTING AUTO T/A VALUES
		3.EURO-4 VGT(CAN)	√	√	√	√	√	RESTTING AUTO T/A VALUES
	4.ABS/ESP		√	√	√	√	√	
	5.SRS-AIRBAG	1.GENERAL	√	√	√			
		2.NAS	√	√	√			
	6.FULL AUTO AIR/CON.		√	√	√	√	√	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	7.BODY CONTROL MODULE	1.CENTRAL	√	√	√				
		2.NAS	√	√	√				
	8.4WD CONTROL		√	√	√				
	9.IMMOBILIZER	1.GASOLINE				√		PASSWORED TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE	
		2.EURO-3 VGT(KWP)				√		PASSWORED TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE	
		3.EURO-4 VGT(CAN)				√		PASSWORED TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE	
	10.AHLS		√	√	√	√			
	11.CODE SAVING							√	
	39.SANTAFE 01-05	1.ENG. 2.0/2.4(GASOLINE)	1.LEAD ALL	√	√	√	√	√	
			2.UNLEAD GEN	√	√	√	√	√	
			3.UNLEAD 2.0L EOBD	√	√	√	√	√	

**SPX. AUTOBOSS TECH. INC.**  
**Autoboss Scanner Function List**

		4.UNLEAD 2.4L EOBD	√	√	√	√	√	
		5.UNLEAD OBD-II	√	√	√	√	√	FREEZE FRAME DATA , EVAP.TEST(DMTL TEST)
2.ENGINE 2.7L(GASOLINE)		1.LEAD ALL	√	√	√	√	√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
		2.UNLEAD(Ti O2S) GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		3.UNLEAD(Zr O2S) GEN	√	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		4.UNLEAD(Ti O2S) EOBD	√	√	√	√	√	RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		5.UNLEAD(Zr O2S) EOBD	√	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		6.UNLEAD(Ti O2S) OBD-II	√	√	√	√	√	READINESS TEST , FREEZE FRAME DATA , EVAP.TEST(DMTL TEST) , RESETTING ADAPTIVE VALUES
		7.UNLEAD(Zr O2S) OBD-II	√	√	√	√	√	READINESS TEST , FREEZE FRAME DATA , EVAP.TEST(DMTL TEST) , RESETTING ADAPTIVE VALUES
	3.ENGINE(DIESEL)	1.WGT	√	√	√	√	√	
		2.VGT	√	√	√	√	√	
	4.AUTOMATIC TRANSAXLE		√	√	√	√	√	
	5.ANTI-LOCK BRAKE SYSTEM	1.2WD	√	√	√	√	√	AIR BLEEDING MODE
		2.4WD	√	√	√	√	√	AIR BLEEDING MODE
	6.SRS-AIRBAG	1.GENERAL	√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION , HISTORY DTC INFORMATION
		2.NAS	√	√	√			CRASHING INFORMATION , PASS.AIRBAG REALTIME INFO
	7.TRACTION CONTROL		√	√	√	√	√	AIR BLEEDING MODE

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	SYSTEM							
	8.4WD CONTROL		√	√	√			
	9.IMMOBILIZER					√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
	10.CODE SAVING							
40.TRAJET XG 01-06	1.ENG. 2.0L(GASOLINE)	1.LEAD ALL	√	√	√	√	√	FREEZE FRAME DATA, IDLE CO ADJUSTMENT , VERSION CONFIGURATION
		2.UNLEAD GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		3.UNLEAD EOBD	√	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
	2.ENG. 2.7L(GASOLINE)	1.LEAD ALL	√	√	√	√	√	FREEZE FRAME DATA, IDLE CO ADJUSTMENT , VERSION CONFIGURATION

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		2.LEAD(F/LIFT~) ALL	√	√	√	√	√	RESETTING VALUES , ADJUSTMENT , CONFIGURATION	ADAPTIVE IDLE CO VERSION
		3.UNLEAD(Ti O2S) GEN	√	√	√	√	√	RESETTING VALUES , CONFIGURATION	ADAPTIVE VERSION
		4.UNLEAD(Zr O2S) GEN	√	√	√	√	√	FREEZE FRAME DATA , RESETTING VALUES , CONFIGURATION	ADAPTIVE VERSION
		5.UNLEAD(Ti O2S) EOBD	√	√	√	√	√	FREEZE FRAME DATA , VERSION CONFIGURATION	
		6.UNLEAD(Zr O2S) EOBD	√	√	√	√	√	FREEZE FRAME DATA , RESETTING VALUES , CONFIGURATION	ADAPTIVE VERSION
	3.ENGINE(DIESEL)	1.WGT	√	√	√	√	√		
		2.VGT	√	√	√	√	√		
	4.AUTOMATIC TRANSAXLE	1. 2.0(MELCO)/2.7	√	√	√	√	√		
		2. 2.0(SIEMENS)	√	√	√	√	√	RESETTING AUTO T/A VALUES	
		3. DIESEL	√	√	√	√	√		
	5.ANTI-LOCK BRAKE		√	√	√	√	√	AIR BLEEDING MODE	

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	SYSTEM							
	6.SRS-AIRBAG		√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION, HISTORY DTC INFORMATION
	7.IMMOBILIZER	1. 2.0(MELCO)/2.7		√	√			
		2. 2.0(SIEMENS)				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
		3. DIESEL				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE
	8.FUEL FIRED HEATER			√	√	√	√	
	9.CODE SAVING							
41.TAXI 94-01	1.ENGINE L4-SOHC FBM			√	√			
	2.AUTOMATIC TRANSAXLE			√	√	√		
42.TERRAC AN 01-06	1.ENGINE	1. 2.5L DIESEL(TCL)	√	√	√	√	√	
		2. 2.9L DIESEL(C/RAIL)	√	√	√	√	√	
		3.UNLEAD 3.5L GEN	√	√	√	√	√	FREEZE FRAME DATA
		4.UNLEAD 3.5L EOBD	√	√	√	√	√	FREEZE FRAME DATA

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		5.UNLEAD 3.5L OBD-II	√	√	√	√	√	FREEZE FRAME DATA
		6.LEAD 3.5L ALL	√	√	√	√	√	FREEZE FRAME DATA
	2.AUTOMATIC TRANSAXLE		√	√	√	√	√	
	3.ANTI-LOCK BRAKE SYSTEM			√	√	√	√	AIR BLEEDING MODE
	4.SRS-AIRBAG		√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION, HISTORY DTC INFORMATION
	5. 4WD CONTROL	1.EST		√	√			
		2.TOD	√	√	√			
6.IMMOBILIZER	1. 2.5L DIESEL(TCI)		√	√				
	2. 2.9L DIESEL(C/RAIL)				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE	
	3. 3.5L GASOLINE		√	√				
7.CODE SAVING						√		
43.GALLOPER-II	1.ENGINE V6-SOHC	1.UNLEAD 3.0L GEN		√	√	√		
		2.UNLEAD 3.0L IMM/ME		√	√	√		
		3.LEAD 3.0L GEN		√	√	√		

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		4.LEAD 3.0L IMM	√	√	√	√	√	
		5.DIESEL(COVEC-F)	√	√	√	√	√	
	2.AUTOMATIC TRANSAXLE			√	√			
	3.ANTI-LOCK BRAKE SYSTEM	1. ~2000MY		√	√	√	√	AIR BLEEDING MODE
		2. 2001MY BOSCH	√	√	√	√	√	AIR BLEEDING MODE
	4.SRS-AIRBAG		√	√	√			CRASHING INFORMATION , ACTIVE DTC INFORMATION, HISTORY DTC INFORMATION
5.IMMOBILIZER			√	√				
44.SANTA MO	1.ENGINE L4-SOHC	1.UNLEAD 2.0L ALL		√	√	√		
		2.LEAD 2.0L ALL		√	√	√		
	2.ENGINE L4-DOHC	1.UNLEAD 2.0L ALL		√	√	√		
		2.LEAD 2.0L ALL		√	√	√		
	3.AUTOMATIC TRANSAXLE			√	√	√		
	4.ANTI-LOCK BRAKE SYSTEM			√	√	√	√	AIR BLEEDING MODE
	5.SRS-AIRBAG			√	√			CRASHING INFORMATION
	6.IMMOBILIZER			√	√			
45.TUCSON 04-	1.ENGINE(GASOLINE)	1.UNLEAD 2.0L GEN	√	√	√	√	√	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION

**SPX. AUTOBOSS TECH. INC.**  
**Autoboss Scanner Function List**

		2.UNLEAD 2.0L EOBD	✓	✓	✓	✓	✓	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		3.UNLEAD 2.0L OBD-II	✓	✓	✓	✓	✓	READINESS TEST , FREEZE FRAME DATA , EVAP.TEST(DMTL TEST) , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		4.LEAD 2.0L ALL	✓	✓	✓	✓	✓	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
		5.UNLEAD 2.7L GEN	✓	✓	✓	✓	✓	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		6.UNLEAD 2.7L EOBD	✓	✓	✓	✓	✓	FREEZE FRAME DATA , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		7.UNLEAD 2.7L OBD-II	√	√	√	√	√	READINESS TEST , FREEZE FRAME DATA , EVAP.TEST(DMTL TEST) , RESETTING ADAPTIVE VALUES , VERSION CONFIGURATION
		8.LEAD 2.7L ALL	√	√	√	√	√	RESETTING ADAPTIVE VALUES , IDLE CO ADJUSTMENT , VERSION CONFIGURATION
2.ENGINE(DIESEL)		1.EURO-3 WGT	√	√	√	√	√	
		2.EURO-4 VGT(CAN)	√	√	√	√	√	
		3.EURO VGT(KWP)	√	√	√	√	√	
3.AUTOMATIC TRANSAXLE		1.2.0DIESEL/2.7L(MEL CO TCM)	√	√	√	√	√	RESTTING AUTO T/A VALUES
		2. 2.0L(SIEMENS PCM)	√	√	√	√		RESTTING AUTO T/A VALUES
		3.2.0EURO-4	√	√	√	√	√	RESTTING AUTO T/A VALUES
4.ABS/TCS/ESP			√	√	√	√	√	AIR BLEEDING MODE
5.SRS-AIRBAG		1.GENERAL	√	√	√			
		2.NAS	√	√	√			PASS.AIRBAG REALTIME INFO, PODS RESET
6. 4WD CONTROL			√	√	√			

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	7.IMMOBILIZER	1. 2.0L GASOLINE				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE	
		2. 2.7L GASOLINE				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE	
		3. DIESEL				√		PASSWORD TEACHING/CHANGINEG , TEACHING, NEUTRAL MODE, LIMP HOME MODE	
	8.FULL AUTO AIR/CON.		√	√	√	√	√		
	9.ETACS	01.GENERAL	√			√	√		
		02.NAS	√			√	√		
		03.CHINA(JMC)	√			√	√		
	10.CODE SAVING							√	
	46.VERACRUZ 07-	1.ENGINE(GASOLINE)	1.UNLEAD 3.8L GEN	√	√	√	√	√	RESTTING ADAPTIVE VALUES
			2.UNLEAD 3.8L EOBD	√	√	√	√	√	RESTTING ADAPTIVE VALUES
3.UNLEAD 3.8L OBD-II			√	√	√	√	√	RESTTING ADAPTIVE VALUES	
4.LEAD 3.8L ALL			√	√	√	√	√	RESTTING ADAPTIVE VALUES	
2.ENGINE(DIESEL)			√	√	√	√	√		

**SPX. AUTOBOSS TECH. INC.**  
**Autoboss Scanner Function List**

	3.AUTOMATIC TRANSAXLE		√	√	√	√	RESTTING AUTO T/A VALUES
	4.ABS/ESP	√	√	√	√	√	AIR BLEEDING MODE
	5.FULL AUTO AIR/CON.	√	√	√	√	√	
	6.SRS-AIRBAG	√	√	√			
	7.4WD CONTROL	√	√	√	√		
	8.POWER TAIL GATE	√	√	√			PASS.AIRBAG REALTIME INFO
9.BODY CONTROL MODULE	1.BODY CONTROL MODULE	√	√	√	√	√	
	2.DRIVER DOOR MODULE(DDM)	√		√	√	√	
	3.ASSIST DOOR MODULE(ADM)	√		√	√	√	
	4.IMS	√		√	√	√	
	5.TILTTELESCOPE(TILT)	√		√	√	√	
	6.USER OPTION						LOCK/UNLOCK ALARM, ARM/DISARM BY KEY, AUTO DOOR LOCK, GET INGET DOWN LINKAGE

**SPX. AUTOBOSS TECH. INC.**  
**Autoboss Scanner Function List**

	10.IMMOBILIZER	1.GASOLINE				√		PASSWORD TEACHING/CHANGINEG, TEACH, NEUTRAL MODE, LIMP HOME MODE
		2.DIESEL				√		PASSWORD TEACHING/CHANGINEG, TEACH, NEUTRAL MODE, LIMP HOME MODE
	11.AHLS		√	√	√	√		
	12.CODE SAVING						√	
47.i30	1.ENGINE(GASOLINE)	1.UNLEAD 1.6L GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		2.UNLEAD 1.4/1.6L EOBD	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		3.LEAD 1.6L ALL	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		4.UNLEAD1.6L OBD- II	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		5.UNLEAD 2.0L GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		6.UNLEAD 2.0L EOBD	√	√	√	√	√	RESETTING ADAPTIVE VALUES

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

		7.LEAD 2.0L ALL	√	√	√	√	√	RESETTING VALUES	ADAPTIVE
		8.UNLEAD 2.0L OBD-II	√	√	√	√	√	RESETTING VALUES	ADAPTIVE
2.ENGINE(DIESEL)		1.1.6 U-ENGINE WITHOUT CPF	√	√	√	√	√		
		2.1.6U-ENGINE WITH CPF	√	√	√	√	√		
		3.2.0 D-ENGINE	√	√	√	√	√		
3.AUTOMATIC TRANSAXLE		1.1.4/1.6L	√	√	√	√	√	RESTTING AUTO T/A VALUES	
		2.2.0L	√	√	√	√	√	RESTTING AUTO T/A VALUES	
4.ABS/ESP			√	√	√	√	√		
5.SRS-AIRBAG		1.ACU(GEN)	√	√	√				
		2.ACU(NAS)	√	√	√				
6.TPMS			√	√	√	√	√	WARNING STATUS, LFI STATUS(HI-LINE)	
7.FULL AUTO AIR/CON.		1.EOBD	√	√	√	√	√		
		2.GENERAL	√	√	√	√	√		
8.ELEC.POWER STEERING			√	√	√	√			
9.BODY CONTROL MODULE		1.GENERAL	√			√	√		
		2.NAS	√			√	√		

**SPX** AUTOBOSS TECH. INC.  
Autoboss Scanner Function List

	10.IMMOBILIZER	1.GENERAL				√		PASSWORD TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE
		2.DIESEL				√		PASSWORD TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE
	11.CODE SAVING							√
48.i10	1.ENGINE(GASOLINE)	1.UNLEAD EOBD	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		2.UNLEAD GEN	√	√	√	√	√	RESETTING ADAPTIVE VALUES
		3.LEAD ALL	√	√	√	√	√	RESETTING ADAPTIVE VALUES
	2.ENGINE(DIESEL)		√	√	√	√	√	
	3.AUTOMATIC TRANSAXLE		√	√	√	√	√	RESTTING AUTO T/A VALUES
	4.ABS/ESP		√	√	√	√	√	
	5.SRS-AIRBAG		√	√	√			
	6.ELEC.POWER STEERING		√	√	√	√		

**SPX. AUTOBOSS TECH. INC.**  
**Autoboss Scanner Function List**

	7.IMMOBILIZER	1.GASOLINE				√		PASSWORD TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE
		2.DIESEL				√		PASSWORD TEACHING/CHANGINEG, TEACHING, NEUTRAL MODE, LIMP HOME MODE
	8.CODE SAVING							√